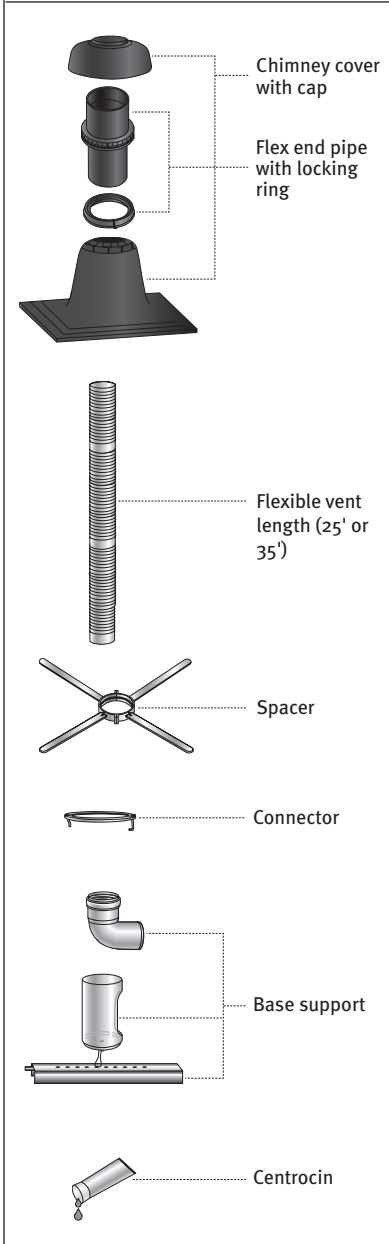
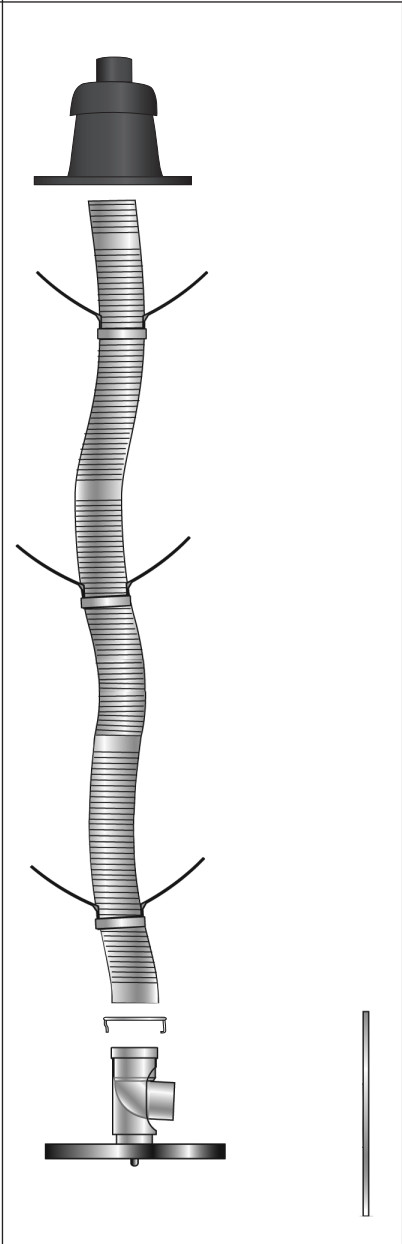

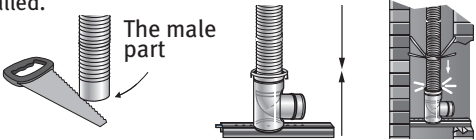
 
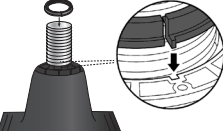

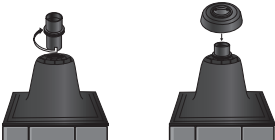
 


FLEXIBLE

Contents of the kit	Installation		
 <ul style="list-style-type: none"> Chimney cover with cap Flex end pipe with locking ring Flexible vent length (25' or 35') Spacer Connector Base support Centrocin 		<ol style="list-style-type: none"> 1 Mount metal section Base Support in base of chimney.  2 Cut the Flex Pipe (just under male part) at the length of the chimney. Attach spacers. Pull Flex Vent Length through chimney inserting male end into Base Support. Ensure that Connector is installed.  3 Fit Chimney Cover over Flex Pipe and attach to chimney with masonry screws provided.  4 Snap on Flex End Pipe Locking Ring to Flex Pipe.  5 Cut Flex Pipe at top of Flex End Pipe Locking Ring at recess in corrugations.  6 Insert Flex End Pipe into Chimney Cover, screwing in tight. Attach top of Chimney Cover.  7 Install Vent Length (sold separately) with Connector into Base Support.  8 Fix the Wall Plate (sold separately). 9 Continue with rigid wall Vent Lengths and Elbows to appliance. 	